

MAINTENANCE MODE:

If you want to set the Speed and Distance to Metric or if there is a problem with the speed or incline and you would like to perform the calibration procedure, use the Maintenance Mode. To enter Maintenance Mode press, and hold for 5 seconds, the Start and Fast keys while installing the safety key.

- In the bottom right corner of the display it will either be blank (for miles) or there will be Km (for kilometers) displayed. Press Fast or Slow buttons to change from one to the other. Press Enter.
- The large display window will now be showing the Roller size. Roller size is used for the calibration process and should be set to 1.85 for TR250 (2.35 for TR350)
- To run the calibration procedure, press the Enter key.
 - The display will show a number for the lowest speed setting (for miles the number should be 0.5). Adjust the low speed setting with the Fast/Slow keys and press Enter.
 - The display will show a number for the top speed setting (for Miles it should be 10.0). Adjust the top speed setting and press Enter.
 - The display will show a number for the maximum incline setting (should be 10). Number can be adjusted with the Up and Down buttons. Press Start to begin calibration.
 - The belt will start automatically and will adjust speeds between low and high. Be careful because the belt will change speeds without warning. When the calibration is finished the display will return to the start-up screen.