

Notice:

This page will replace the Maintenance Mode section of page 20 in your owners manual.

MAINTENANCE MODE:

If you want to set the Speed and Distance to Metric or if there is a problem with the speed and you would like to perform the calibration procedure, use the Maintenance Mode. To enter Maintenance Mode press, and hold for 5 seconds, the Start and Fast keys while installing the safety key.

- The large display window will now be showing the Roller size. Roller size is used for the calibration process and should be set to 2.35 for TR350. Press the Fast or Slow button to change.
- The large display window will also display the setting for M (miles) or K (Kilometers). Press the Stop key to change between M and K.
- To run the calibration procedure, press the Start key.
 - The display will show a number for the lowest speed setting (for miles the number should be 0.5). Adjust the low speed setting with the Fast/Slow keys and press Start.
 - The Speed window will show a number for the top speed setting (for Miles it should be 10.0). The Incline window will display the Max Incline (number should be 12). Press Start to begin calibration.
 - The belt will start automatically and will adjust speeds between low and high. Be careful because the belt will change speeds without warning. When the calibration is finished the display will return to the start-up screen.