



**SB540r**



***OWNER'S MANUAL***

# Table of Contents

Product Registration.....	2
Important Safety Instructions.....	3
Important Electrical Information.....	4
Important Operation Instructions.....	4
Assembly Instructions.....	5
Features.....	12
Operation of Your New Bike.....	13
Maintenance.....	19
Manufacturer's Limited Warranty.....	20

## Serial number sticker location





**CONGRATULATIONS ON YOUR  
NEW BIKE AND WELCOME  
TO THE XTERRA FAMILY!**

Thank you for your purchase of this quality recumbent bike trainer from Xterra. Your new bike has been manufactured by one of the leading fitness manufacturers in the world and is backed by one of the most comprehensive warranties available. Xterra will do all we can to make your ownership experience as pleasant as possible for many years to come.

If you have questions, or if parts are missing or damaged, or you require customer service, call (870) 935-1107. Please have your Model number and serial number handy when you call.

Please take a moment at this time to record below the name of the store, their telephone number, and the date of purchase for easy contact in the future. We appreciate your confidence in Xterra and we will always remember that you are the reason that we are in business. Please complete and mail your registration card today and enjoy your new bike.

Yours in Health,  
The folks at Xterra Fitness

Name of Dealer \_\_\_\_\_  
Telephone Number of Dealer \_\_\_\_\_  
Purchase Date \_\_\_\_\_

## ***Product Registration***

### **RECORD YOUR SERIAL NUMBER**

Please record the Serial Number of this fitness product in the space provided below.

Serial Number \_\_\_\_\_

### **REGISTER YOUR PURCHASE**

The self-addressed product registration card must be completed in full and returned to Xterra fitness, or visit: [www.xterrafitness.com](http://www.xterrafitness.com) to register online.

# ***Important Safety Instructions***

**WARNING - Read all instructions before using this appliance.**

- Do not operate unit on deeply padded, plush or shag carpet. Damage to both carpet and bike may result.
- Before beginning this or any exercise program, consult a physician. This is especially important for persons over the age of 35 or persons with pre-existing health conditions.
- Keep children away from the bike. There are obvious pinch points and other caution areas that can cause harm.
- Keep hands away from all moving parts.

Never operate the bike if it has a damaged cord or plug. If the bike is not working properly, call your dealer.

- Keep the cord away from heated surfaces.
- Do not operate where aerosol spray products are being used or where oxygen is being administered. Sparks from the motor may ignite a highly gaseous environment.
- Never drop or insert any object into any openings.
- Do not use outdoors.
- To disconnect, turn all controls to the off position, then remove the plug from the outlet.
- Do not attempt to use your bike for any purpose other than for the purpose it is intended.
- The hand pulse sensors are not medical devices. Various factors, including the user's movement, may affect the accuracy of heart rate readings. The pulse sensors are intended only as exercise aids in determining heart rate trends in general.
- Wear proper shoes. High heels, dress shoes, sandals or bare feet are not suitable for use on your bike. Quality athletic shoes are recommended to avoid leg fatigue.

**SAVE THESE INSTRUCTIONS - THINK SAFETY!**

## ***Important Electrical Information***

### **WARNING!**


- **NEVER** remove any cover without first disconnecting AC power supply.
- If A.C. voltage varies by ten percent (10%) or more, the performance of your bike may be affected. **Such conditions are not covered under your warranty.** If you suspect the voltage is low, contact your local power company or a licensed electrician for proper testing.
- **NEVER** expose this bike to rain or moisture. This product is **NOT** designed for Use outdoors, near a pool or spa, or in any other high humidity environment. Maximum environmental ratings are 40-120 degrees Fahrenheit, 95% humidity non-condensing (no water droplets forming on surfaces).

## ***Important Operation Instructions***


- **NEVER** operate this bike without reading and completely understanding the results of any operational change you request from the computer.
- Understand that changes in resistance do not occur immediately. Set your desired level on the computer console and release the adjustment key. The computer will obey the command gradually.
- **NEVER** use your bike during an electrical storm. Surges may occur in your household power supply that could damage bike components.
- Use caution while participating in other activities while using your bike such as watching television, reading, etc. These distractions may cause you to lose balance, resulting in serious injury.

# ASSEMBLY PACK CHECK LIST


## Step 1

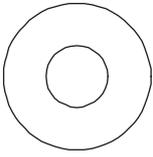


#70 - 5/16" x 18mm  
Flat Washer (6pcs)

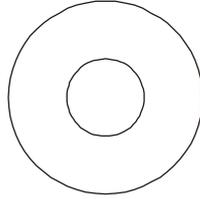


#97 - 3/8" x 23mm  
Curved Washer (2pcs)

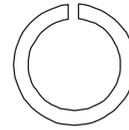


#73 - 5/16" Split  
Washer (6pcs)

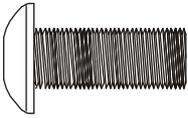


#95 - 5/16" x 3/4"  
Button Head Socket Bolt (6pcs)

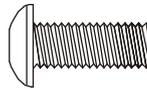


#99 - M6 x 15mm  
Phillips Head Screw (4pcs)

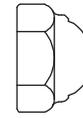


#98 - 3/8"  
Cap Nut (2pcs)

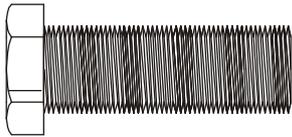

#90 - 5/16" x 1- 1/4"  
Hex Head Bolt (6pcs)

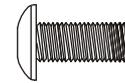


#81 - M5 x 12mm  
Phillips Head Screw (4pcs)

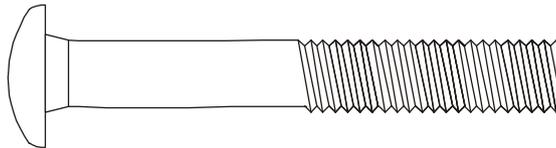

#96 - 3/8" x 3-1/2" Carriage Bolt (2pcs)


## Step 2

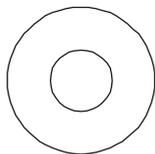

#71 - 3/8" x 19mm  
Flat Washer (4pcs)




#80. 3/8"  
Nyloc Nut (4pcs)

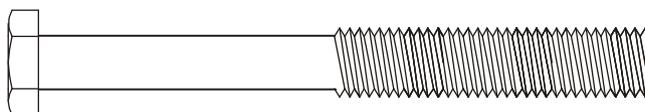


#100 - 3/8" x 3" Hex Head Bolt (4pcs)

## ASSEMBLY PACK CHECK LIST


### Step 3

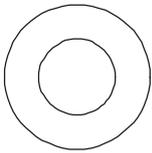


#71 - 3/8" x 19mm  
Flat Washer (6pcs)

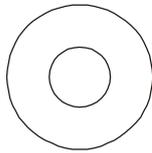


#70 - 5/16" x 18mm  
Flat Washer (4pcs)

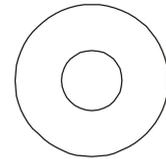

#102 - 5/16" x 19mm  
Curved Washer (2pcs)

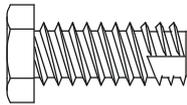


#101 - 3/8" x 3/4"  
Self Tapping Screw (6pcs)

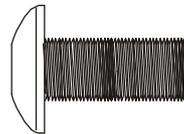


#95 - 5/16" x 3/4"  
Button Head Socket Bolt (6pcs)


### Step 4

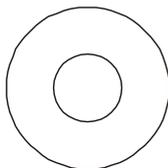


#70 - 5/16" x 19mm  
Flat Washer (2pcs)

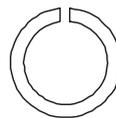

#73 - 5/16"  
Split Washer (2pcs)

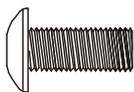


#81 - M5 x 12mm  
Phillips Head Screw (4pcs)

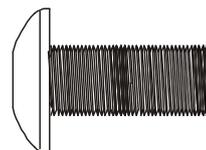


#95 - 5/16" x 3/4"  
Button Head Socket Bolt (2pcs)


**Tools**

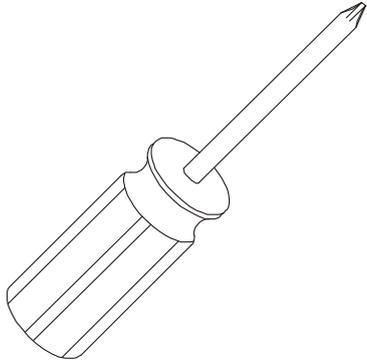


#105 - Phillips Screw Driver (1 pc)

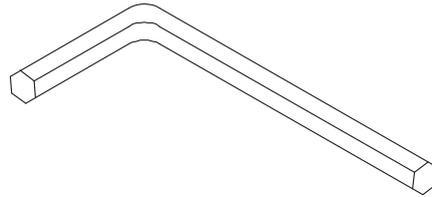

#106 - M5 Allen Wrench (1pc)

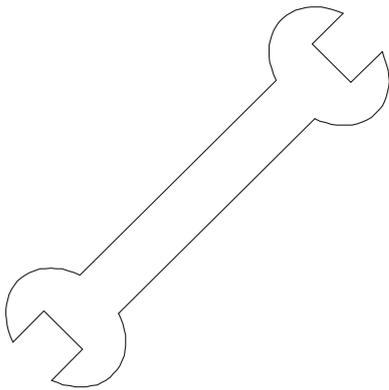

#103 - 12/14mm Wrench (1pc)

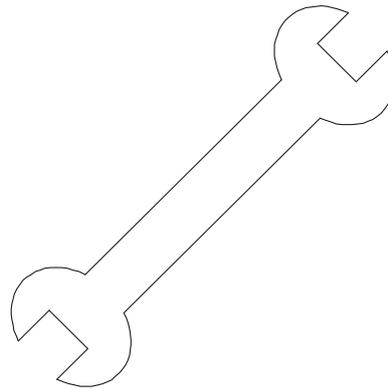


#104 - 14/15mm Wrench (1pc)

# Assembly Instructions for Xterra SB540r


## STEP 1: SEAT ASSEMBLY & REAR STABILIZER

- Install the **rear stabilizer tube**(18) and secure with two 3/8" Carriage bolts (96), 3/8" curved washers (97) and 3/8" cap nuts (98).
- Sitting next to the unit with the **seat post** (11) in your lap, connect the two wires together (109 & 110). Secure the seat post to the main frame – be careful to not pinch the wires – with the six 5/16" x 3/4" bolts (95), 5/16" split washers (73) and 5/16" flat washers (70).
- Lay the **seat cushion** (52) on the floor, cushion side down, and then lay the seat carriage assembly (4 & 14) on top of the seat cushion. Align the holes and secure the seat cushion with four M6 x 15mm screws (99). Make sure seat cushion is facing the right direction.
- Secure the **seat carriage assembly** (4 & 14) to the seat post with four 5/16" x 1-1/4" bolts (90). Make sure these bolts are very tight. Assemble the plastic end caps (42) to the seat carriage with four M5 x 12mm screws (81).

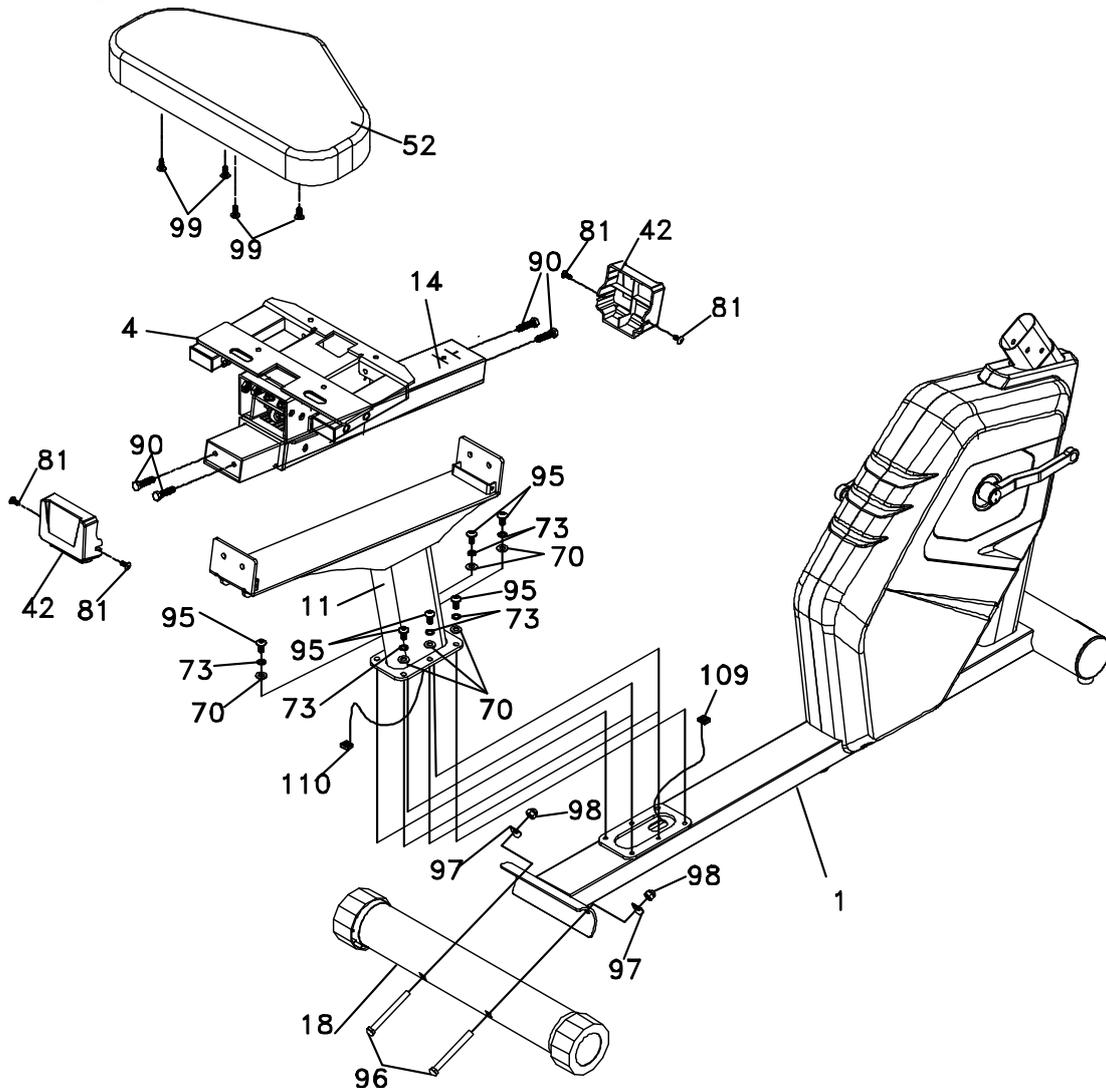


## STEP 2: Rear Handle Bars

- Install the handlebars (6 & 7) to the seat carriage with four 3/8" x 3" bolts (100), 3/8" flat washers (71) and 3/8" nuts (80). Be careful that the wires do not get pinched while assembling the handlebars. The wires for the pulse sensors (111 & 112) will be connected in step 4; just leave them hanging for now.

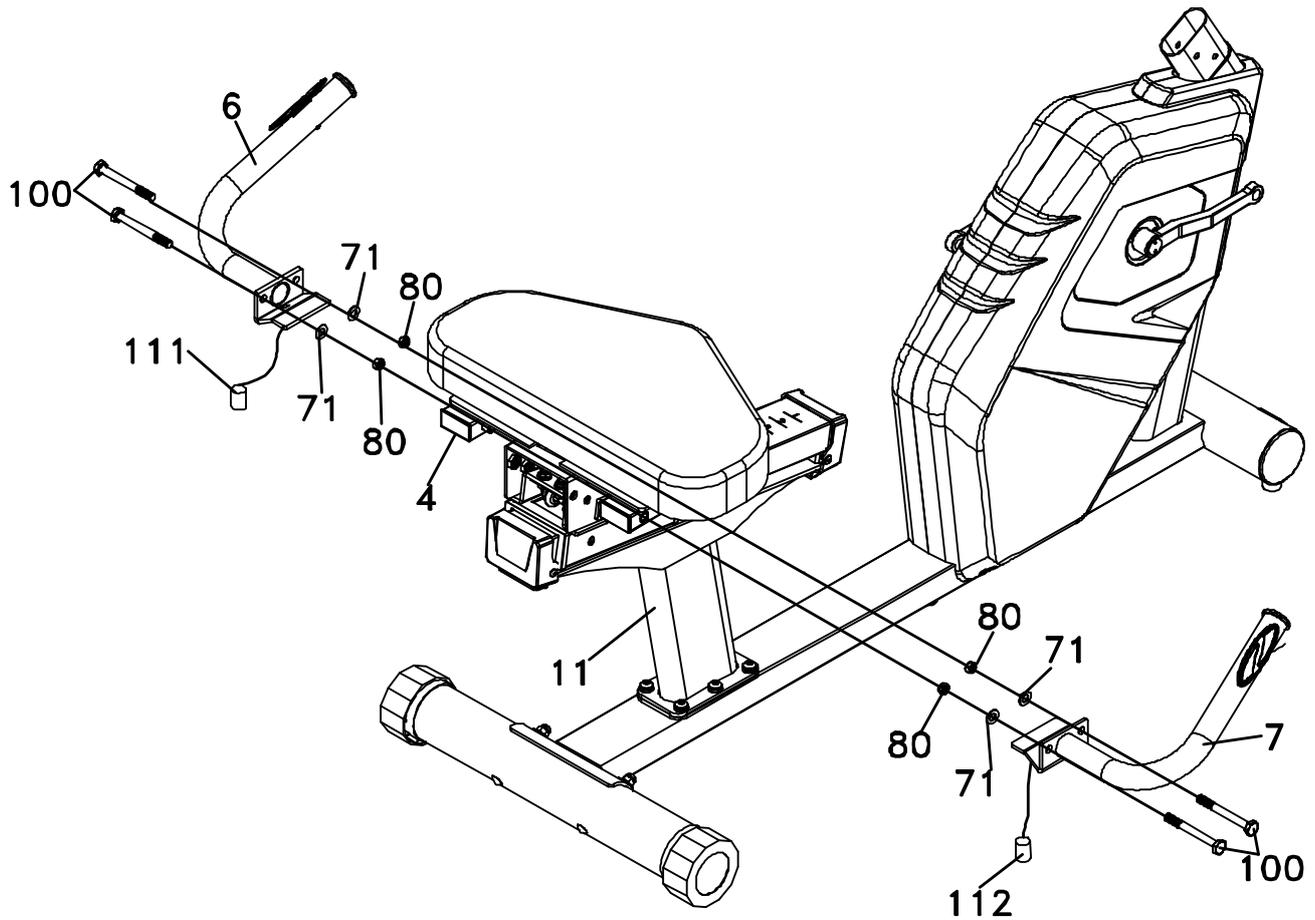


### STEP 3: Console Mast & Seat Back

- Secure the **seat back assembly** (5) to the seat carriage with six 3/8" x 3/4" bolts (101) and 3/8" flat washers (71). Make sure these bolts are very tight.
- Run the two wires (107 & 109) through the bottom of the **console mast** and out the hole at the top. Slide the console mast into the mating tube; pull slightly on the two wires while you install the console mast so they do not get pinched. Secure the mast with six 5/16" x 3/4" bolts, four 5/16" Washers (70) on the side bolts and two 5/16" curved washers (102) on the two front bolts. Make sure to start all six bolts first before tightening all the way.

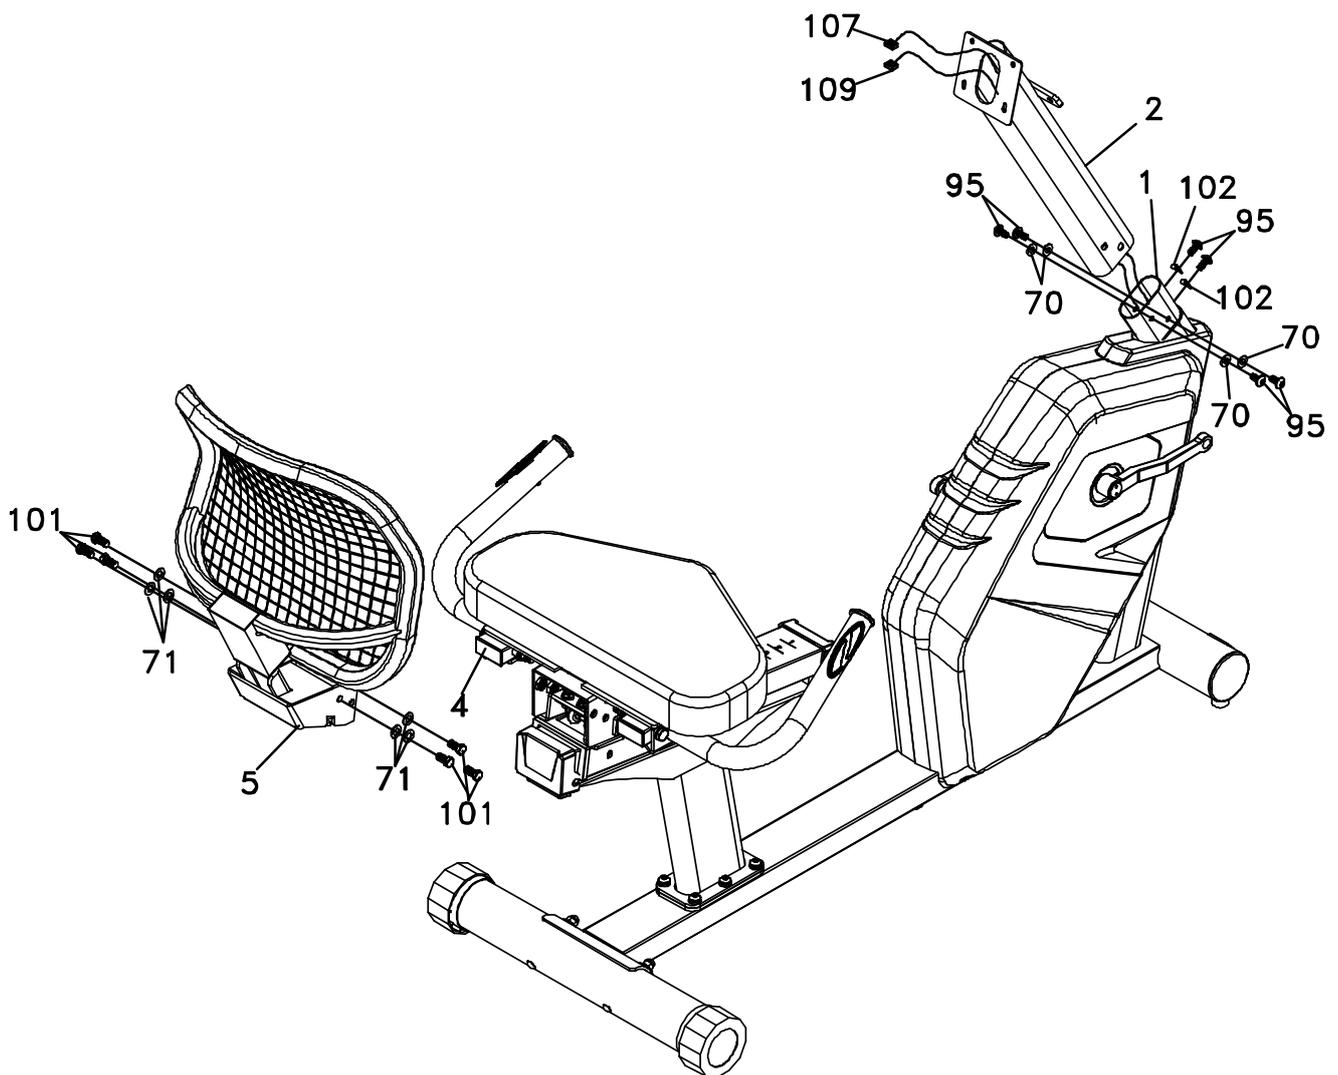

## STEP 4: Console, Handle Bars and Pedals

- Install the front handlebars (3) and secure with two 5/16" x 3/4" bolts (95), 5/16" split washers (73) and flat washers (70).
- Connect the two wires (107 & 109) to the mating connectors on the back of the **console** (94) and secure the console with four M5 x 12mm screws (81). Be careful not to pinch the wires between the console and mounting plate.
- Install the two pedals onto the crank arms. The left pedal (35) is a reverse thread so as you turn the pedal bolt into the crank arm turn it counter-clockwise as if you are loosening it. The right side pedal (36) is a normal thread so tighten it clockwise. Make sure the pedals are as tight as you can possibly get them. It may be necessary to re-tighten them again after a few hours of use.

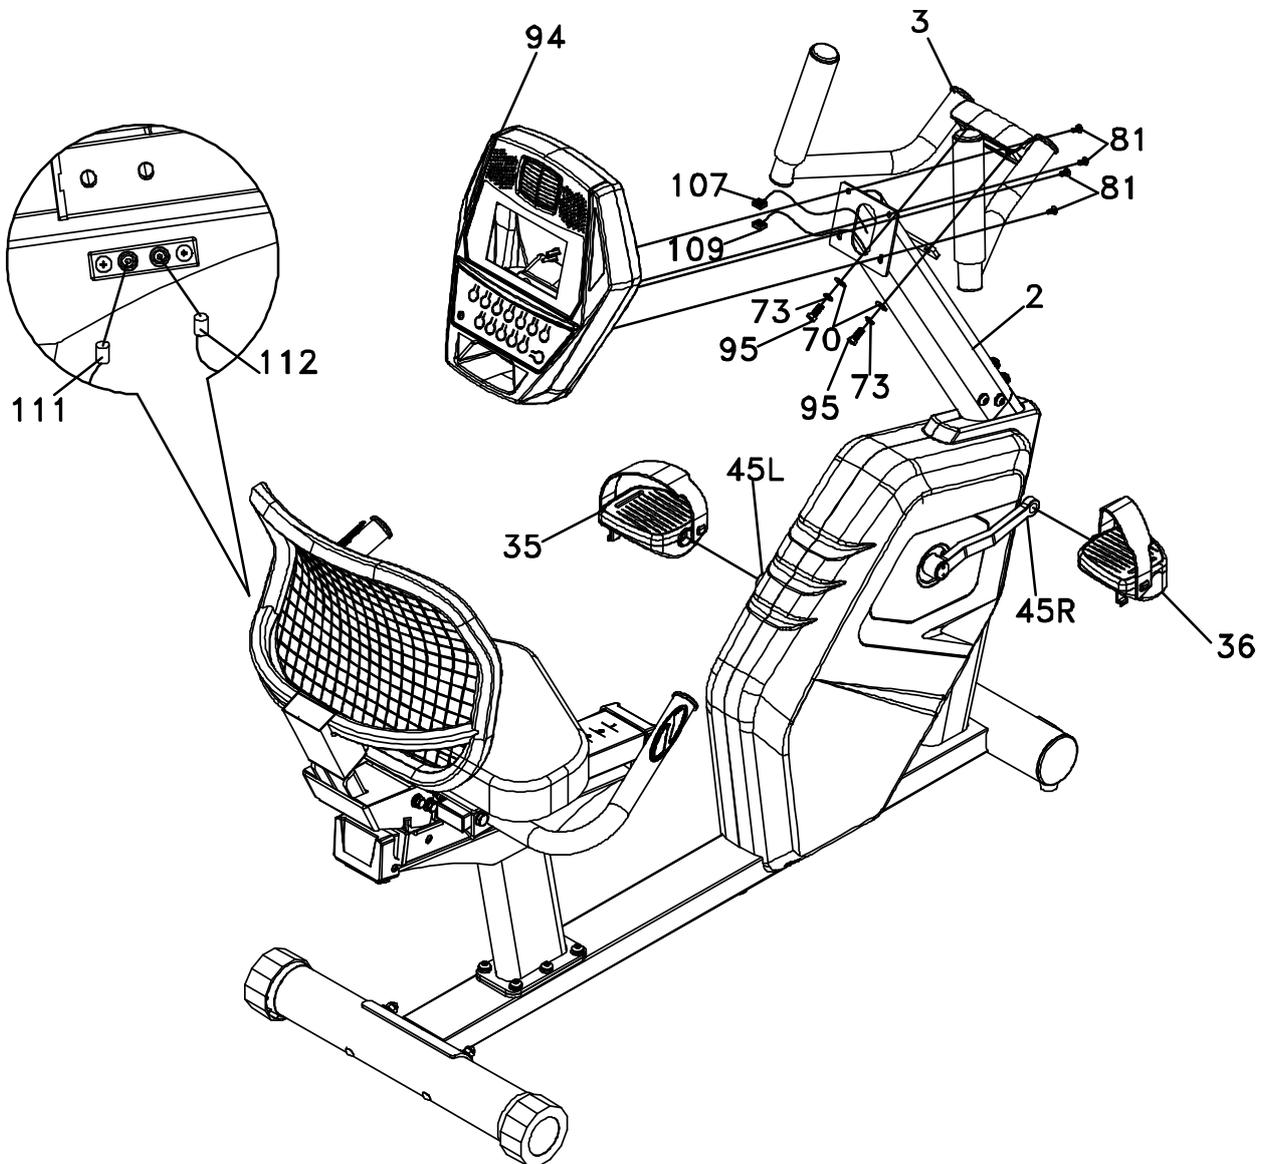

# Features


## Foot pedals

Through research performed with a leading sports scientist and physical rehabilitation expert the engineers at Xterra have developed a breakthrough in pedal design. Typical stationary exercise bikes are wider than a normal road bike to allow for the braking mechanism, pulleys, drive components and beauty covers. Since the bike is wider, so is the distance between the pedals; this width between the pedals is called the Q factor.

Xterra has designed our pedal system so the Q factor is the smallest in the industry, but we did not stop there. We have also custom designed and tooled a new pedal that provides a two degree inward tilt to compensate for the Q factor not being perfect. Having a small Q factor in addition to the two degree inward tilt of the pedals puts the user into a biomechanical neutral alignment. This means that your feet, ankles, knees and hips are lined up properly so you can workout more comfortably for a longer time.

## Transportation

The bike is equipped with two transport wheels, which are engaged when rear of the Bike is lifted.

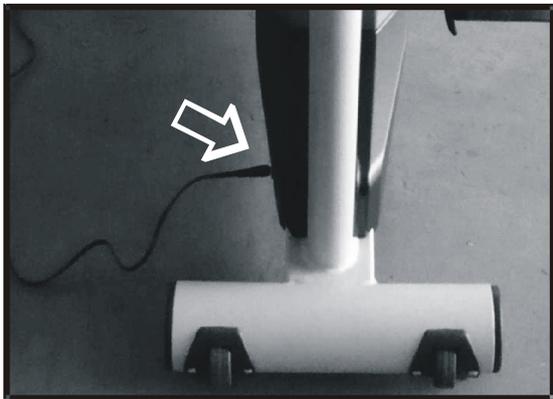

**POWER CONNECTOR LOCATED ON FRONT, RIGHT HAND SIDE OF UNIT.**

## Operation of Your Bike Console



### Power up

The Elliptical is supplied with an external power supply. When power is connected to the Elliptical, the console will automatically power up. If there is no input to the console for 20 minutes the console will go to stand-by mode to save energy. To turn the console on press any key.

When initially powered on the console will perform an internal self-test. During this time all the lights will turn on. When the lights go off the dot matrix display will show a software version (i.e.: VER 1.0) and the time and distance windows will display an odometer reading. The odometer reading displays how many hours the elliptical has been used and how many virtual miles the elliptical has gone. The odometer will remain displayed for only a few seconds then the console will go to the start up display. The dot matrix display will be scrolling through the different workout profiles of the programs and the message window will be scrolling an instructional message. You may now begin to use the console.

## Console Operation

### Quick Start mode

This is the quickest way to start a workout. After the console powers up you just press the Start key to begin. In Quick Start the Time will count up from zero and the workload may be adjusted manually by pressing the Up or Down keys. The dot matrix display will show a work profile with a ¼ mile track around it and a lap counter to the left. Pressing the Enter key will switch the display from track to a hill type profile. To the right of the dot matrix is a number that indicates your work level.

### Basic information and functions:

The **Data displays:**

- **Pulse** indicates your heart rate if you are grasping the hand pulse sensors.
- **Time** shows elapsed time unless you set the timer to count down.
- **Distance** displays accumulated mileage.
- **Calories** show an accumulation of calories burned (Kcal). The number shown is just an estimate; your actual calorie burn most likely will be different. The only way to get an accurate calorie reading is in a laboratory setting connected to a host of machines.

**Message Window:** Instructions are displayed to assist in programming the console and during a workout the message window will display workout data as described below.

- **Speed** shows your speed in miles per hour if there is an 'M' displayed to the left of the track/profile window, and kilometers per hour if 'Km' is displayed. Press the Enter key to switch the display to see your Speed in RPM.
- **Level** Pressing the enter key again will switch the display to show your current work level.

The Elliptical has a built in **heart rate monitoring system**. Simply grasping the hand pulse sensors on the stationary handle bars will start the heart icon blinking (this may take a few seconds). The Pulse Display Window will display your heart rate in beats per minute.

The **Stop/Reset** button performs several functions. Pressing the Stop/Reset key once during a program will **Pause** the program for 5 minutes. If you need to get a drink, answer the phone or any of the many things that could interrupt your workout, this is a great feature. To resume your workout during Pause just press the Start key. If the Stop/Reset button is pressed twice during a workout the program will end and a summary of your workout is displayed. If the Stop/Reset key is held down for 3 seconds the console will perform a complete **Reset**. Pressing the stop key while you are setting up a program will take you back one step to the previous screen.

There is an **Audio Input Jack** on the front of the console and built-in speakers. You may plug any low-level audio source signal into this port. Audio sources include MP3, Ipod, portable radio, CD player or even a TV or computer audio signal.

### Programming the console

Each of the programs can be customized with your personal information and changed to suit your needs. Some of the information asked for during programming is necessary to ensure the readouts are correct. You will be asked for your **Age** and **Weight**. Entering your **Age** is necessary during the Heart Rate control program to ensure the correct settings are entered in the program. Entering your **Weight** aides in calculating a more correct **Calorie** reading; although we cannot provide an exact calorie count we do want to be as close as possible.

**A message about Calories:** Calorie readings on every piece of exercise equipment, whether it is in a gym or at home, are not accurate and tend to vary widely. They are meant only as a guide to monitor your progress from workout to workout. The only way to measure your calorie burn accurately is in a clinical setting connected to a host of machines. This is because every person is different and burns calories at a different rate.

## Entering a program/Changing Settings

Press the program keys to scroll through the program selections. The profile for each program will be displayed in the dot matrix window. Press the enter key to select a program and begin customizing the settings. If you want to workout without entering new settings then just press the Start key. This will bypass the programming of data and take you directly to the start of your workout. If you want to change the personal settings then just follow the instructions in the message window. If you start a program without changing the settings, the default settings will be used.

NOTE: Age and Weight default settings will change when you enter a new number. So the last Age and Weight entered will be saved as the new default settings. If you enter an age and weight the first time you use the Elliptical you will not have to enter it every time you work out unless either your age or weight changes or someone else enters a different age and weight.

## Programming:

### Manual

The Manual program works as the name implies, manually. This means that you control the workload yourself and not the computer.


1. Press the Manual program button then press the **Enter** key.
2. The message window will ask you to enter your **Weight**. You may adjust the weight setting using the Up and Down keys, then press enter to continue.
3. The message window will ask you to enter your **Age**. You may adjust the age setting using the Up and Down keys, then press the Enter key to accept the new number and proceed on to the next screen.
4. Next is the **Time**. You may adjust the Time and press enter to continue.
5. Now you are finished editing the settings and can begin your workout by pressing the Start key.
6. Once the program starts the elliptical will be set to level one. This is the easiest level and it is a good idea to stay at level one for a while to warm up. If you want to increase the work load at any time press the Up key; the Down key will decrease the workload.
7. When the program ends the message window will show a summary of your workout. The summary will be displayed for a short time then the console will return to the start-up display.

## Preset Programs

The Elliptical has seven different programs that have been designed for a variety of workouts. These seven programs have factory preset profiles for achieving different goals.


### P-1 Sunrise

The Sunrise program simulates going up and down a gentle hill. The resistance in the pedals will steadily increase and then decrease during the program.

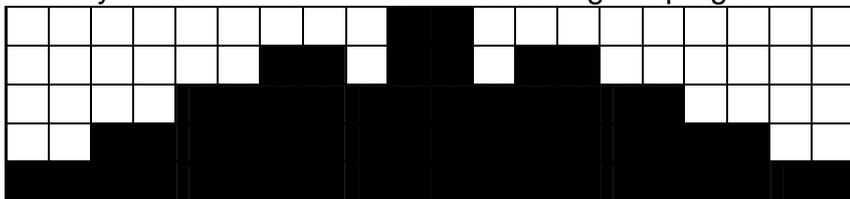

### P-2 Journey

The Journey program is designed to maximize the burning of fat, a lifelong journey for some of us. There are many schools of thought on the best way to burn fat, but most experts agree that a lower exertion level that stays at a steady workload is the best. The absolute best way to burn fat is to keep your heart rate at around 60% to 70% of its maximum potential. This program does not use heart rate but simulates a lower, steady exertion workout.

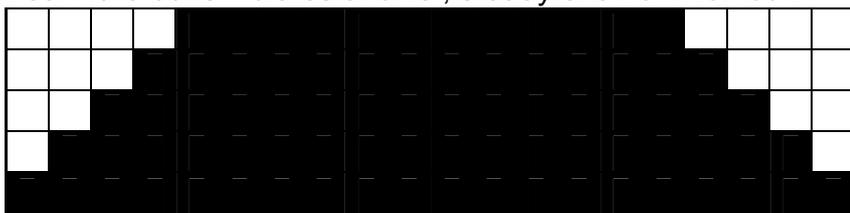


### P-3 Wild Ride

The Wild Ride program is designed to increase your cardio vascular function; this is exercise for your heart and lungs. It will build up your heart muscle and increase blood flow and lung capacity. This is achieved by incorporating a higher level of exertion with slight fluctuations in work....a real Wild Ride!




### P-4 Xtreme

The Xtreme program is designed to increase muscular strength in your lower body with extreme resistance. This program will steadily increase in resistance to a high level and then keeps you there. This is designed to strengthen and tone your legs and glutes.

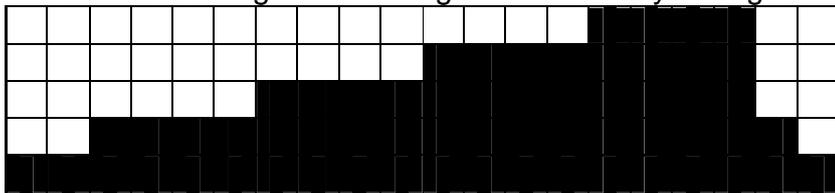


## P-5 Canyons

The Canyons program takes you through high levels of intensity followed by periods of low intensity. This program increases your endurance by depleting your oxygen level followed by periods of recovery to replenish oxygen. Your cardio vascular system gets programmed to use oxygen more efficiently this way.

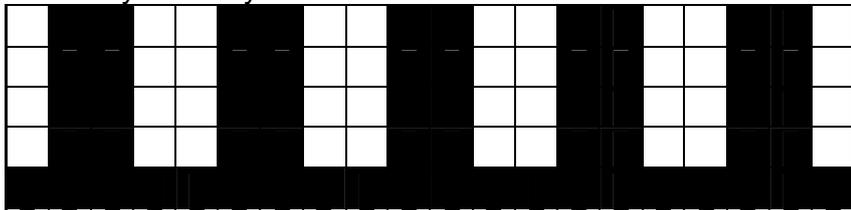


## P-6 Thrill Hill

The Thrill Hill program combines a few types of workout in one, with variations of cardio and strength portions to give you a thrill.

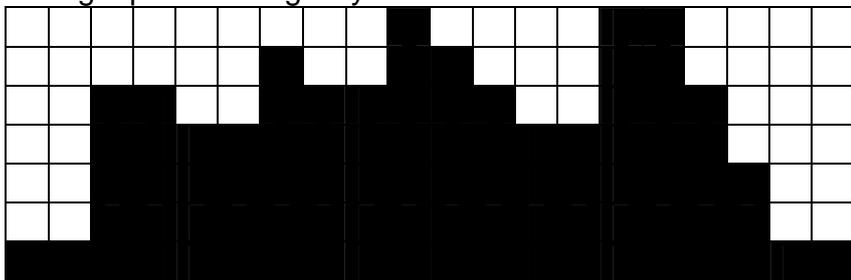

## P-7 X-Country

The X-Country program simulates a cross country run across uneven terrain.

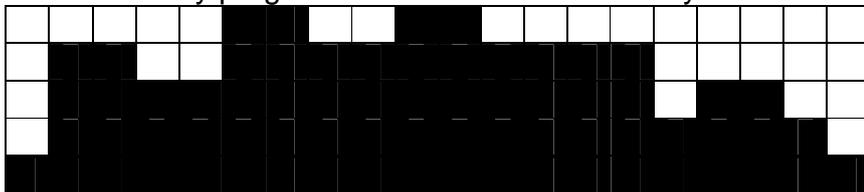

## Programming Preset Programs:

1. Select the desired program then press the **Enter** key.
2. The message window will ask you to enter your **Weight**. You may adjust the weight setting, using the Up and Down keys, then press the Enter key to accept the new number and proceed on to the next screen.
3. You are now asked to enter your **Age**. You may adjust the age number using the Up and Down keys, then press enter to continue.
4. Next is **Time**. You may adjust the Time and press enter to continue.
5. Now you are asked to adjust the **Max Level**. This is the peak exertion level you will experience during the program (work level at the top of the hill). Adjust the level and then press enter.
6. Now you are finished editing the settings and can begin your workout by pressing the Start key.
7. If you want to increase or decrease the workload at any time during the program press the Up or Down key. This will change only the work level during the current segment.
8. During the program you will be able to switch between a quarter mile track or profile display in the dot matrix window.
9. When the program ends the message window will show a summary of your workout. The summary will be displayed for a short time then the console will return to the start-up display.

## Custom User Defined Programs

The customizable **User** programs allow you to build and save your own workout. You can build your own custom program by following the instructions below.

1. Select the **User** program (U1 or U2) then press enter.
2. When you press enter, the message window will show “Welcome....press start...” if there is no name saved. If the name “David” had been previously saved the message window will show “Welcome David....” and the D will be blinking. If there is a name saved you can change it or you may press the Stop key to keep the name and continue to the next step. If you want to enter a new name press enter. Then use the Up and/or the Down key to change the first letter and press Enter to save the first letter and continue to the next letter. When you have finished entering the name press the Stop key to save the name and continue to the next step.
3. The message window will ask you to enter your **Weight**. You may enter your weight using the Up and Down keys, then press the Enter key to accept the new number and proceed on to the next screen.
4. You are now asked to enter your **Age**. You may adjust the age number using the Up and Down keys, then press enter to continue.
5. Next is **Time**. You may adjust the total program time and press enter to continue.
6. Now the message window will ask you to adjust the first segment level; use the up & down keys to adjust. When you finish adjusting the first segment, or if you don't want to change it, then press enter to continue to the next segment.
7. The next segment will show the same level as the previously adjusted segment. Repeat the same process as the last segment then press enter. Continue this process until all twenty segments have been set.
8. The message window will ask you to press start, which will start the program and also save the program in memory.
9. If you want to increase or decrease the workload at any time during the program press the Up or Down key. This will only affect the workload for the present position in the profile. When the profile changes to the next column it will return to the preset work level.
10. When the program ends the message window will show a summary of your workout. The summary will be displayed for a short time then the console will return to the start-up display.

## Heart Rate Control Program operation

To start the **HRC** program follow the instructions below or just select the HRC program then the Enter button and follow the directions in the message window.

1. Select the **HRC** program then press the **Enter** key.
2. The message window will ask you to enter your **Weight**. You may enter your weight using the Up and Down keys then press the Enter key to accept the new number and proceed.
3. You are now asked to enter your **Age**. You may adjust the age number using the Up and Down keys then press enter to continue.
4. You are now asked to select the target heart rate (THR) level. This is the heart rate level you will experience during the program. Adjust the level and then press enter.
5. Next is **Time**. You may adjust the Time and press enter to continue.
6. Now you are finished editing the settings and can begin your workout by pressing the Start key.
7. If you want to change the THR at any time during the program press the Up or Down key.

When the program ends the message window will show a summary of your workout. The summary will be displayed for a short time then the console will return to the start-up display

## Maintenance:

1. Wipe down all areas in the sweat path with a damp cloth after each workout.
2. If a thump, clicking or wobbly feeling develops the main cause is usually the pedals and/or crank arms being loose.

## Maintenance Menu in console software:

The console has built in maintenance/diagnostic software. The software will allow you to change the console settings from English to Metric and turn off the beeping of the speaker when a key is pressed for example. To enter the Maintenance menu (may be called Engineering mode, depending on version) press and hold down the Start, Stop and Enter keys. Keep holding the keys down for about 5 seconds and the message window will display "Engineering mode". Press the enter button to access the menu below. Press the up and down keys to navigate the menu.

- a. **Display test** (tests all the display functions, press enter to perform test)
- b. **Key test** (will allow you to test all the keys to make sure they are functioning)
- c. **Functions** (Press enter to access settings, use up/dn keys to scroll)
  - i. **ODOMETER reset** (reset the odometer)
  - ii. **Units** (Set to English or Metric display readings)
  - iii. **Bike or Elliptical** (changes settings so the console can be used on an Xterra bike or elliptical)
  - iv. **Sleep mode** Turns on/off sleep mode.
  - v. **Motor test** (continually runs the tensioning gear motor)
  - vi. **Manual** (Allows stepping of the gear motor)
  - vii. **Key tone** (Turn on or off the beep when a key is pressed)
- d. **Security** (Allows you to lock the keypad so no unauthorized use is allowed) When the child lock is enabled, the console will not allow the keypad to operate unless you press and hold the Start and Enter buttons for 3 seconds to unlock the console.
- e. **Clear EEPROM** for engineering use only

# Manufacturer's Limited Warranty

## Effective July 15, 2009 BIKE LIMITED WARRANTY

Xterra Fitness Inc. warrants all its home use bike parts for a period of time listed below, from the date of retail sale, as determined by a sales receipt or in the absence of a sales receipt, eighteen (18) months from the original factory shipping date. Xterra's responsibilities include providing new or remanufactured parts, at Xterra's option, and technical support to our independent dealers and servicing organizations. In the absence of a dealer or service organization, these warranties will be administered by Xterra Fitness directly to a consumer. The warranty period applies to the following components:

Home Use Limited WARRANTY	
Frame and Brake	Lifetime
All Other Components	3 Years
Labor	1 Year

### NORMAL RESPONSIBILITIES OF THE CONSUMER

This warranty applies only to products in ordinary household use. The consumer is responsible for the items listed below:

1. The warranty registration card must be completed and returned to the address listed on the card within 10 days of the original purchase to validate the manufacturer's limited warranty or register online at [www.xterrafitness.com](http://www.xterrafitness.com)
2. Proper use of the bike in accordance with the instructions provided in this manual, including maintenance.
3. Proper connection to a power supply of sufficient voltage, replacement of blown fuses, repair of loose connections or defects in house/facility wiring.
4. Expenses for making the bike accessible for servicing, including any item that was not part of the bike at the time it was shipped from the factory.
5. Damages to the bike finish during shipping, installation or following installation.

### EXCLUSIONS

This warranty does not cover the following:

1. CONSEQUENTIAL, COLLATERAL, OR INCIDENTAL DAMAGES SUCH AS PROPERTY DAMAGE AND INCIDENTAL EXPENSES RESULTING FROM ANY BREACH OF THIS WRITTEN OR ANY IMPLIED WARRANTY.  
*Note: Some states do not allow the exclusion or limitation of incidental or consequential damages, so this limitation or exclusion may not apply to you.*
2. Service call reimbursement to the consumer. Service call reimbursement to the dealer that does not involve malfunction or defects in workmanship or material, for units that are beyond the warranty period, for units that are beyond the service call reimbursement period, for bikes not requiring component replacement, or bikes not in ordinary household use.
3. Damages caused by services performed by persons other than authorized Xterra Fitness service companies, use of parts other than original Xterra parts, or external causes such as alterations, modifications, abuse, misuse, accident, improper maintenance, inadequate power supply, or acts of God.
4. Products with original serial numbers that have been removed or altered.
5. Products that have been; sold, transferred, bartered, or given to a third party.
6. Products that are used as store display models.
7. Products that do not have a warranty registration on file at Xterra Fitness, inc. Xterra Fitness reserve the right to request proof of purchase if no warranty record exists for the product.
8. THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR PURPOSE.

### SERVICE

Keep your bill of sale. Twelve (12) months from the date on the bill of sale or eighteen (18) months from the date of factory shipping as determined by the serial number establishes the warranty period should service be required. If service is performed, it is in your best interest to obtain and keep all receipts. This written warranty gives you specific legal rights. You may also have other rights that vary from state to state. Service under this warranty must be obtained by following these steps, in order:

1. Contact your selling authorized Xterra Fitness dealer. OR
2. Contact your local authorized Xterra Fitness service organization.
3. If there is a question as to where to obtain service, contact our service department at (870) 935-1107.
4. Xterra's obligation under this warranty is limited to repairing or replacing, at Xterra's option, the product through one of our authorized service centers. All repairs must be preauthorized by Xterra. If the product is shipped to a service center freight charges to and from the service center will be the customer's responsibility. For replacement parts shipped while the product is under warranty, the customer will be responsible for shipping and handling charges. For in-home service, the customer will be responsible for a trip charge. There will be an additional trip charge if the customer is located over 100 miles from the nearest service center.
5. The owner is responsible for adequate packaging upon return to Xterra. Xterra is not responsible for damages in shipping. Make all freight damage claims with the appropriate freight carrier. DO NOT SHIP ANY UNIT TO OUR FACTORY WITHOUT A RETURN AUTHORIZATION NUMBER. All units arriving without a return authorization number will be refused.
6. For any further information, or to contact our service department by mail, send your correspondence to:

**Xterra Fitness, Inc.**  
**P.O. Box 2037**  
**Jonesboro, AR 72402-2037**

Product features or specifications as described or illustrated are subject to change without notice. All warranties are made by Xterra Fitness, Inc. This warranty applies only in the 50 states of the U.S.A.